

REVERSE OSMOSIS



THEORY

Principles of Reverse
Osmosis Membrane
Separation

X Lewabrane®

LANXESS
Energizing Chemistry

Index

- 1. Basics and Principle of Reverse Osmosis.....3
 - 1.1 Overview of RO application.....3
 - 1.2 Principle of Reverse Osmosis3
 - 1.3 RO membrane description4
 - 1.4 RO membrane performance4
 - 1.4.1 Flow Rate.....4
 - 1.4.2 Permeate Flux.....5
 - 1.4.3 Salt Rejection.....5
 - 1.4.4 Recovery Rate5
 - 1.4.5 Differential Pressure (Pressure Drop)6
 - 1.4.6 Transmembrane Pressure6
 - 1.4.7 Tendency of RO Performance6
 - 1.4.8 Element Construction.....8

Notice: Please note that the information and recommendations provided in this technical brochure do not claim to be universally valid; in particular, they are not meant to substitute, amend or supplement the information and/or instructions provided by the OEM of the RO membrane system and/or the facility operator. In fact, LANXESS strongly recommends to obtain written confirmation from the OEM of the RO system and/or the facility operator before using the chemicals described in our technical brochure, installation of the RO elements and operation of the RO membrane system, and to verify the advice and information provided herein in each case as to its compatibility with the overall water treatment facility and RO membrane system.

1. Basics and Principle of Reverse Osmosis

1.1 Overview of RO application

Reverse Osmosis (RO) is a separation technique that is suitable for a wide range of applications, especially when salt and/or dissolved solids need to be removed from a solution. Accordingly, RO can be used for seawater and brackish water desalination, to produce both water for industrial application, and drinking water. It can also be applied for the production of ultrapure water (e.g. semiconductor, pharmaceutical industries) and boiler feed water. In addition, RO membrane systems are used for wastewater and water reuse treatments.

RO is currently considered one of the most economic and effective process for water desalination. Accordingly, it is often the appropriate technique to treat solutions having salt concentrations from 100 to over 50,000 mg/ liter. Solutions with salinity from surface water to sea water, and even brines, can be treated by RO membrane.

Cross flow is the configuration applied for membrane separation using RO membrane. As shown in Figure 1.1 the feed water stream flows tangentially to the membrane surface. A fraction of the water in this feed stream passes through the membrane, whereas the majority of the feed flow travels along the surface. Thus, two streams are collected:

- permeate, almost pure water containing low concentration of ions
- concentrate, having high concentration of small particles and dissolved ions

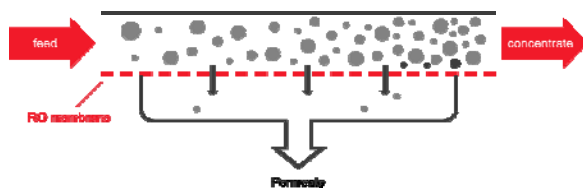


Figure 1.1: Schematic flow of RO membrane

In operation, the RO membrane system is continuously supplied with feedwater which produces a constant water movement from feed to concentrate. When in cross-flow operation, there is little accumulation of the rejected solutes and fouling or scaling can be minimized.

1.2 Principle of Reverse Osmosis

Osmosis is a natural phenomenon which can be defined as the movement of pure water through a semi permeable membrane from a low to a high concentration solution (see Figure 1.2). The membrane is permeable to water and some ions but rejects almost all ions and dissolved solids. This process (movement of water) occurs until the osmotic equilibrium is reached, or until the chemical potential is equal on both sides of the membrane.

A difference of height is observed between both compartments when the chemical potential is equalized. The difference in height expresses the osmotic pressure difference between the two solutions.

Reverse osmosis is a process which occurs when pressure, greater than the osmotic pressure, is applied to the concentrated solution. Water is forced to flow from the concentrated to the diluted side, and solutes are retained by the membrane (see Figure 1.2).

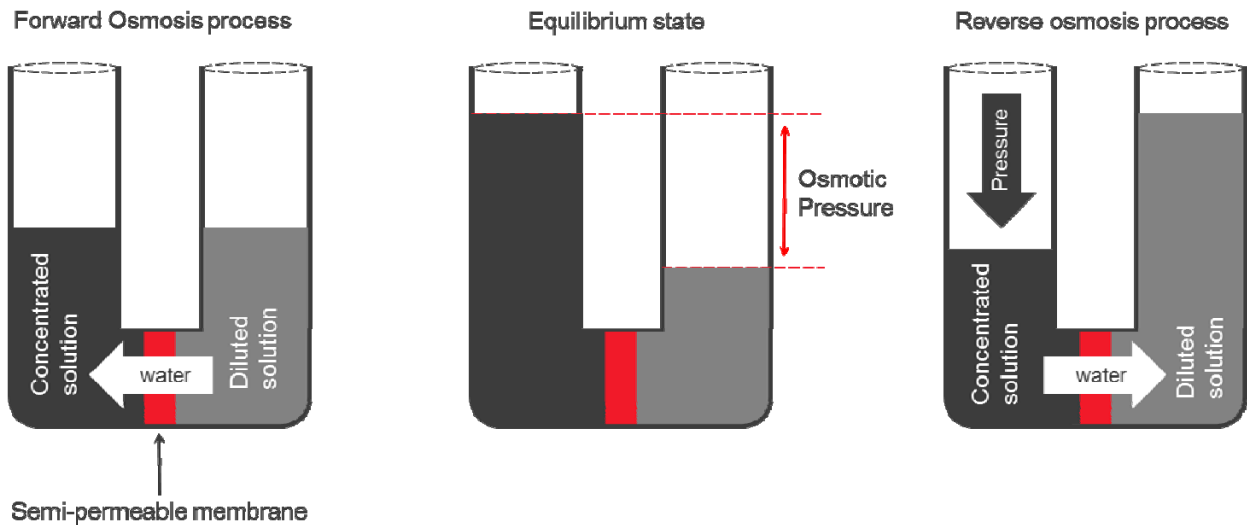


Figure 1.2: Principle Osmosis and of Reverse Osmosis (RO)

1.3 RO membrane description

RO membranes can be supplied in both flat sheet and HFF (Hollow Fine Fiber) structural formats. The flat sheet RO membrane is composed of three layers.

As shown in Figure 1.3, there is a non-woven polyester support layer, a polysulfone layer, and on top the polyamide barrier layer. The barrier layer is formed by the polyamide of which the molecular structure is shown in Figure 1.3.

1.4 RO membrane performance

The performance of an RO membrane is defined by various parameters. The important parameters are defined below.

1.4.1 Flow Rate

In RO device there are three streams. The feed stream is separated by RO membrane into permeate and concentrate streams. Flow rates of these streams are usually expressed in cubic meters per hour (m^3/h) or in gallons per minute (gpm). Feed flow rate is defined as the rate of water entering the RO system. Permeate flow rate is defined as the rate of water passing through the RO membrane, and concentrate flow rate is defined as the rate of flow which has not passed through the RO membrane, and comes out from the RO system with rejected ions.

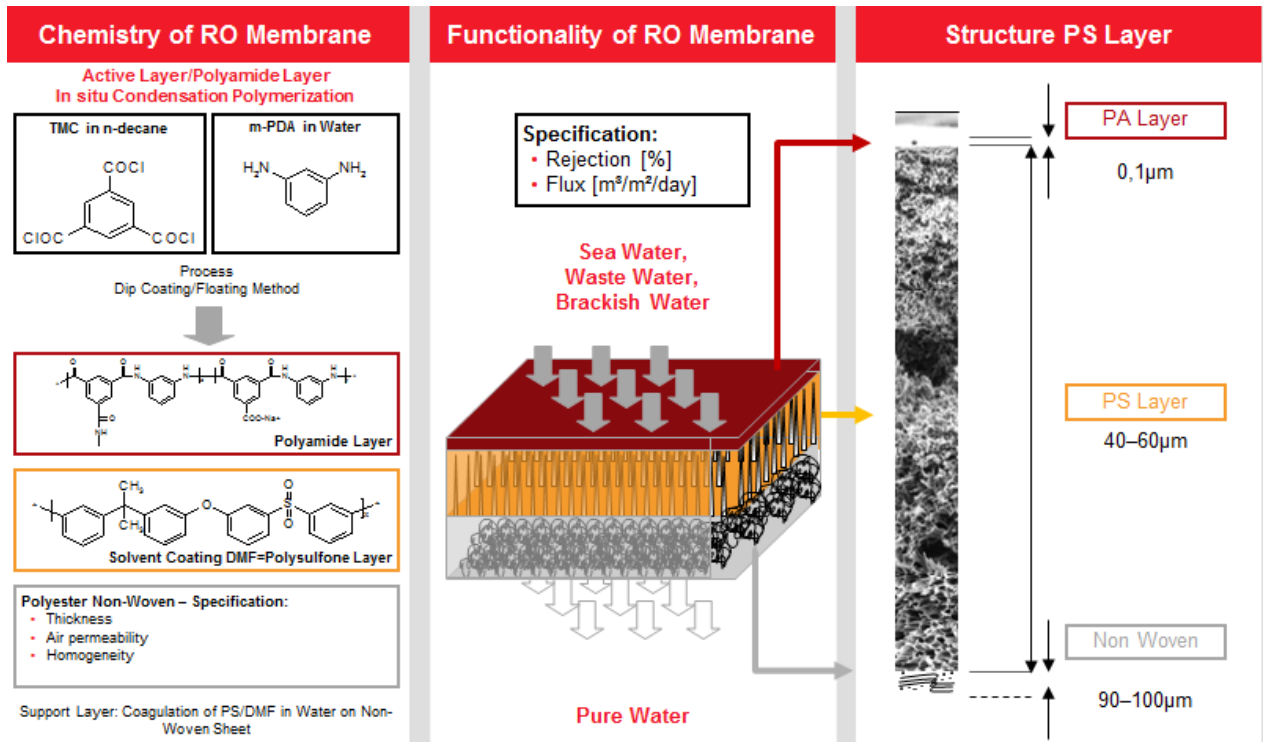


Figure 1.3: Structure of RO membrane

1.4.2 Permeate Flux

Permeate flux describes the quantity of permeate produced during membrane separation per unit of time and RO membrane area. The flux is measured in liters per square meters per hour (lmh) or in gallons per square feet per day (gfd).

The flux is defined by:

$$J_v = \frac{Q_p}{S} \quad (1.1)$$

In which: J_v , permeate flux, S , area of the membrane, Q_p , permeate flow rate

1.4.3 Salt Rejection

Salt rejection is a percentage which describes the amount of solute retained by the RO membrane. The retention is given by:

$$R = \left(1 - \frac{C_p}{C_{ave}}\right) * 100 \quad (1.2)$$

In which: R , rejection, C_p , permeate concentration, C_f , feed concentration C_c , concentrate concentration

C_{ave} is average feed concentration, which is calculated as follows.

$$C_{ave} = \frac{(C_f + C_c)}{2}$$

1.4.4 Recovery Rate

The recovery rate is defined as the fraction of the feed flow which passes through the membrane. It is usually expressed in percentage.

$$Y = \frac{Q_p}{Q_f} \quad (1.3)$$

In which: Y , recovery rate, Q_p , permeate flow rate, Q_f , feed flow rate

1.4.5 Differential Pressure (Pressure Drop)

The pressure drop is the difference between the feed and concentrate pressure during water flow through one or more RO membrane elements. The pressure drop (dp) is defined by:

$$dp = P_f - P_c \quad (1.4)$$

In which: P_f , feed pressure, P_c , concentrate pressure

1.4.6 Transmembrane Pressure

Transmembrane pressure (TMP or ΔP) is defined as the difference in pressure between the feed side and the permeate side of the membrane. This pressure is usually measured in bar or psi, and is the driving force for membrane separation and permeate production. In general, an increase in the transmembrane pressure increases the flux across the membrane.

The transmembrane pressure (TMP) is defined by:

$$TMP = \frac{P_f + P_c}{2} - P_p \quad (1.5)$$

In which: P_p , permeate pressure, P_f , feed pressure, P_c , concentrate pressure

1.4.7 Tendency of RO Performance

The main parameters of RO membrane unit are average permeate flux which defines the permeate production and the salt rejection which determines the quality of permeate. These two parameters can be influenced by operating parameters such as feed pressure, feed concentration, temperature, etc. These factors influence the RO membrane system performance, and are summarized in the following Table 1.1.

When considering changes of feed concentration, the salt rejection increases with the increase of the concentration first.

Reaching the highest value of rejection in the average feed salinity range of 300 – 500 mg/l. Afterwards, the salt rejection decreases as the feed concentration increases. The above discussion variability of salt rejection is shown schematically in Figure 1.4.

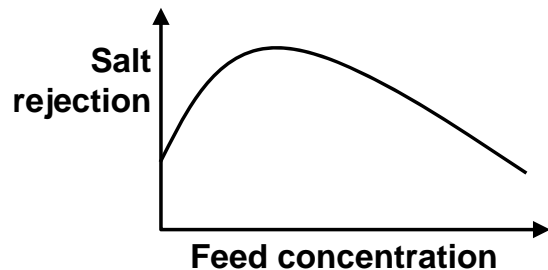


Figure 1.4: Feed concentration effect on RO membrane rejection

The influence of the pH of the feed solution on the rejection of solutes is complex because the pH fluctuation affects the charge of membrane surface as well as dissociation rate and state of the solutes. However, the following trends of rejection can be shown in Table 1.2.

Increase of Conditions	Tendency		Reason for Membrane Performances Change
	Flux	Rejection	
Feed Pressure	↗	↗	Permeate flux is proportional to net driving pressure. Solute permeation rate does not increase with pressure. As a result, the flux and the salt rejection increase.
Feed Concentration	↘	↘ ↗	Net driving pressure decreases by osmotic pressure. At lower salinity (ex. < 400 mg/l), the salt rejection decreases due to charged effect of RO membrane.
Temperature	↗	↘	Permeate flux increases with temperature (3%/degC) mainly owing to decrease of water viscosity. Solute permeation rate increases with temperature more than permeate flux.
Concentrate Flow Rate	↗	↗	At low flow rate, concentration polarization occurs, as a result, the concentration at the membrane surface becomes higher, and osmotic pressure increases.

Table 1.1: Operating conditions and effect on RO system performance

Chemicals	pH Range (Acidity)	pH Range (Alkalinity)	Reason of Membrane Rejection Change
Acidic Compounds	low	high	The dissociation of acids at alkaline pH enhances the rejection because of the charge repulsion occurring between compounds and membrane surface.
Basic Compounds	high	low	The dissociation of alkaline compounds at acidic pH enhances the rejection because of the charge repulsion occurring between compounds and membrane surface.
SiO ₂	low	high	An increase of pH modifies the ionization of silica from silica acid to silicate, therefore increasing the rejection.
Boron	low	high	An increase of pH modifies the ionization of boron from boric to borate, therefore increasing the rejection.

Table 1.2: Feed pH effect on RO membrane rejection

1.4.8 Element Construction

Several designs are available for making RO membrane and elements. These membrane devices are available in plate and frame, tubular and hollow fiber membrane module configuration. The Lewabrane® RO membrane elements from LANXESS are manufactured as “spiral wound RO membrane elements”.

The most common element device for RO membrane application is assembled according to spiral-wound configuration.

This format provides the highest degree of packing density. The spiral-wound module uses flat sheets wound around a centre pipe.

The membranes are glued along three sides to form membrane leaves attached to a permeate channel (centre pipe) placed along the unsealed edge of the membrane leaf. The internal side of the leaf contains a permeate spacer designed to support the membrane sheet without collapsing under pressure.

This permeate spacer is porous and conducts permeate to the centre pipe. A feed channel spacer (a net-like sheet) is placed between the leaves to define the feed channel height (typically round 1 mm) and provide mass transfer benefits. The membrane leaves are wound around the centre pipe and given an outer casing (Figure 1.5). This design provides a high packing density (300-1000 m²/m³).

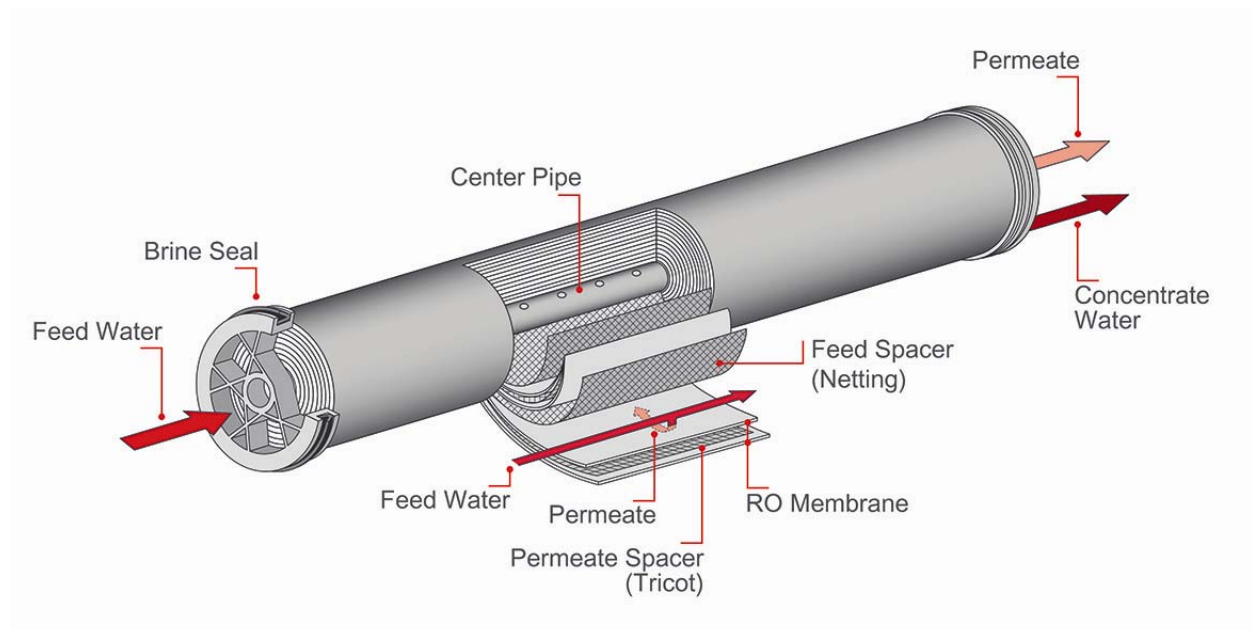


Figure 1.5: Typical spiral-wound element construction

DISCLAIMER

Health and Safety Information: Appropriate literature has been assembled which provides information concerning the health and safety precautions that must be observed when handling the LANXESS products mentioned in this publication. For materials mentioned which are not LANXESS products, appropriate industrial hygiene and other safety precautions recommended by their manufacturers should be followed. Before working with any of these products, you must read and become familiar with the available information on their hazards, proper use and handling. This cannot be overemphasized. Information is available in several forms, e.g., material safety data sheets, product information and product labels. Consult your LANXESS representative in Germany or contact the Regulatory Affairs and Product Safety Department of LANXESS Deutschland GmbH or - for business in the USA - the LANXESS Product Safety and Regulatory Affairs Department in Pittsburgh, PA, USA.

Regulatory Compliance Information: Some of the end uses of the products described in this publication must comply with applicable regulations, such as the FDA, BfR, NSF, USDA, and CPSC. If you have any questions on the regulatory status of these products, contact - for business in the USA - your LANXESS Corporation representative, the LANXESS Regulatory Affairs Manager in Pittsburgh, PA, USA or for business outside US the Regulatory Affairs and Product Safety Department of LANXESS Deutschland GmbH in Germany.

The manner in which you use and the purpose to which you put and utilize our products, technical assistance and information (whether verbal, written or by way of production evaluations), including any suggested formulations and recommendations are beyond our control.

Therefore, it is imperative that you test our products, technical assistance and information to determine to your own satisfaction whether they are suitable for your intended uses and applications. This application-specific analysis must at least include testing to determine suitability from a technical as well as health, safety, and environmental standpoint. Such testing has not necessarily been done by us. Unless we otherwise agree in writing, all products are sold strictly pursuant to the terms of our standard conditions of sale. All information and technical assistance is given without warranty or guarantee and is subject to change without notice. It is expressly understood and agreed that you assume and hereby expressly release us from all liability, in tort, contract or otherwise, incurred in connection with the use of our products, technical assistance, and information.

Any statement or recommendation not contained herein is unauthorized and shall not bind us. Nothing herein shall be construed as a recommendation to use any product in conflict with patents covering any material or its use. No license is implied or in fact granted under the claims of any patent.

© 2013 – All Rights Reserved
LANXESS Deutschland GmbH

CONTACT

LANXESS Deutschland GmbH
Business Unit Liquid Purification Technologies
Kennedyplatz 1
50569 Köln, Germany

E-mail: lewabrane@lanxess.com
Web site: <http://lewabrane.com/>

Edition: November 2013